


# INSTALLATION INSTRUCTIONS FOR ACCESSORIES FOR BEZELED SHADES AND LASSO PAR-TECH®LYTESPOTS

**READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.**

1. Place **HOLDER** into the back of **BEZEL** or **RUBBER RING** as shown in Fig. 1.
2. Position the two **SPRINGS** by swinging them out as indicated in Fig. 1.

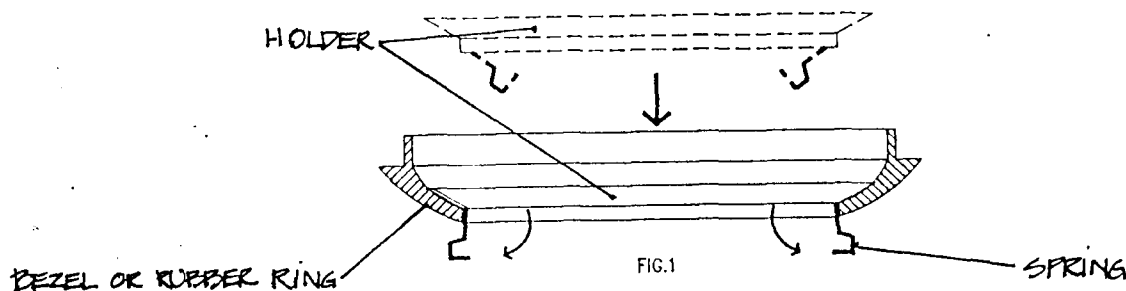

3. Slide the selected **LENS** or **LOUVER** (only one may be used) between the two **SPRINGS** as shown in Fig. 2.

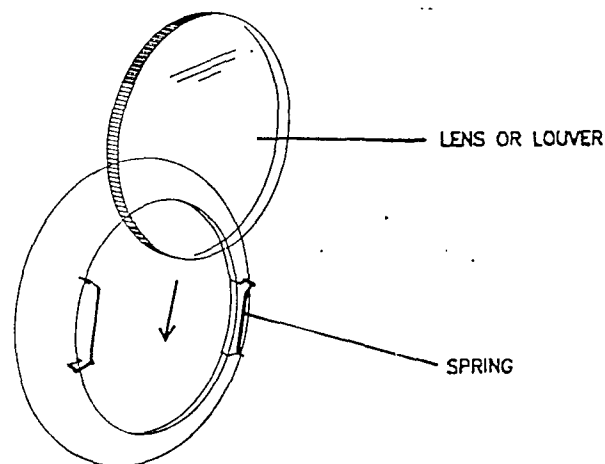


FIG. 2

ACCESSORY	BEZEL 16	BEZEL 20 LASSO 20	BEZEL 30 LASSO 30
HOLDER	#8591	#8592	#8593
BEAM ELONGATOR	#7557	#8557	#8567
BEAM SMOOTHER	#7558	#8558	#8568
LOUVER	#7559	#8559	#8569

## INSTALLATION INSTRUCTIONS FOR BARNDOOR ACCESSORY

1. Install the accessories holder (see other side).
2. Fold **BARNDOOR BLADES** forward so they won't interfere. Hook one **SPRING** into one **SLOT** in the back of **BARNDOOR'S** frame, then pull the second **SPRING** and let it fall into the second **SLOT** as shown in Fig. 3.

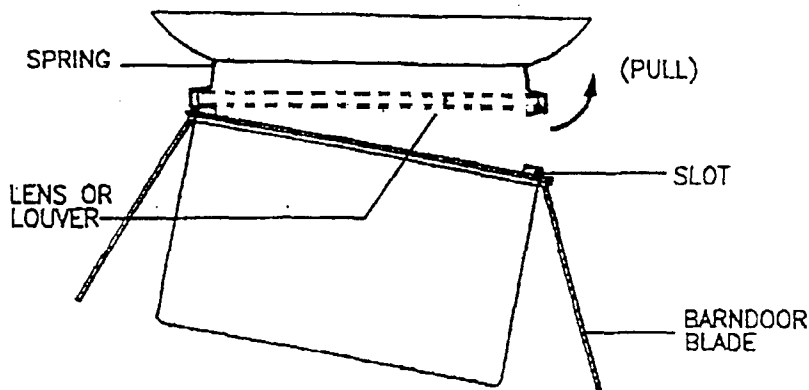


FIG. 3

3. When **BARNDOOR** is used in combination with one **LENS** or **LOUVER**, install **LENS** or **LOUVER** (**BEHIND BARNDOOR'S FRAME**) AS SHOWN IN FIG. 2
4. Adjust **BLADES** to desired position.

	BEZEL 16	BEZEL 20 WIRE RING 20	BEZEL 30 WIRE RING 30	WIRE RING 38
BARNDOORS	N/A	#8542	#8543	#8544